 

 



 



 

 

 

 

 

 

 

 

 
 


 

 

 

 



 

 

 

 

 

 



 

 







 







| Original  | Substitut     | Original  | Substitut             |
|---|---------------|---|-----------------------|
|    | Power         |    | Power                 |
|    | Open/Close    |    | Eject / Surround      |
|    | Radio & Input |    | TV/Radio /            |
|    | 1             |    | 1                     |
|    | 2             |    | 2                     |
|    | 3             |    | 3                     |
|    | 4             |    | 4                     |
|    | 5             |    | 5                     |
|    | 6             |    | 6                     |
|    | 7             |    | 7                     |
|  | 8             |  | 8                     |
|  | 9             |  | 9                     |
|  | Clear         |  | Exit / Cancel / Clear |
|  | 0             |  | 0                     |
|  | Repeat        |  | Shift + Green / APP / |
|  | I<<           |  | I<< / Preset-         |
|  | <<            |  | << / Tune-            |

| Original  | Substitut     | Original  | Substitut             |
|---|---------------|---|-----------------------|
|    | >>            |    | >> / Tune+            |
|    | >>I           |    | >>I / Preset+         |
|    | Stop          |    | Stop / Hold           |
|    | Play          |    | Play / Slow           |
|    | Pause         |    | Pause / Step / Freeze |
|    | Speaker Level |    | Subtitle / EQ         |
|    | Vol+          |    | Vol+                  |
|    | Optical       |    | Setup / OPT /         |
|    | Sound Effect  |    | Sound / Title         |
|    | Vol-          |    | Vol-                  |
|  | Mute          |  | Mute / Dimmer         |
|  | Home          |  | Menu / Home           |
|  | Music ID      |  | Audio / Lang I/II     |
|  | Info/Display  |  | Info / Angle          |
|  | Up/Preset Up  |  | Up                    |
|  | Left/Tuning-  |  | Left                  |
|  | Enter         |  | OK                    |





| Original         | Substitut                      |
|------------------|--------------------------------|
| Right/Tuning+    | Right                          |
| Down/Preset      | Down                           |
| Back             | Back / Return                  |
| Title/Pop Up     | Display / Media                |
| Disc Menu        | D.Menu / Top                   |
| Red              | Red / Netflix / Search         |
| Green            | Green / APP / Repeat           |
| Yellow           | Yellow / YouTube / Repeat      |
| Blue/Mono/Stereo | Blue / Prime Video / Random    |
| Marker           | Fav / Marker / PC              |
| Search           | Shift + Red / Netflix / Search |
| Sleep            | Sleep / Timer                  |
| Rec              | Rec / Rec Mode                 |
| Power Tv         | Shift + Power                  |
| Vol+ Tv          | Shift + Vol+                   |
| PR/CH+ Tv        | CH+ / Page+                    |
| AV Input Tv      | AV / Input / RDS               |

| Original  | Substitut    |
|-----------|--------------|
| Vol- Tv   | Shift + Vol- |
| PR/CH- Tv | CH- / Page-  |

