











 

 











 

 










 
































Original		Substitut		Original		Substitut	
	Power		Power		Vol-		Vol-
	Input		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		Guide		Guide / EPG / -/--
	3		3		Up		Up
	4		4		i		Info / Angle
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	0		0		<<		<< / Tune-
	TXT		Text / Goto		Pause		Pause / Step / Freeze
	Vol+		Vol+		>>		>> / Tune+
	Mute		Mute / Dimmer		Rec		Rec / Rec Mode
	P+		CH+ / Page+		Play		Play / Slow





Original	Substitut	Original	Substitut
 Stop	 Stop / Hold		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

