












 

 

 


 





























Original	Substitut	Original	Substitut
Theatre	 Fav / Marker / PC	Clear	 Exit / Cancel / Clear
One-Touch Play	 +  Shift + Play /	0	 0
Power	 Power	Time	 +  Shift + Sleep / Timer
Sleep	 Sleep / Timer	Audio	 Audio / Lang I/II
Night	 Text / Goto	Subtitles / D.Tuning	 Subtitle / EQ
Dynamic Bass	 Eject / Surround	Angle	 +  Shift + Info / Angle
TV	 +  Shift + 1	System Menu	 +  Shift + Menu /
TV	 TV/Radio /	Red	 Red / Netflix / Search
1	 1	Green	 Green / APP / Repeat
2	 2	Yellow	 Yellow / YouTube / Repeat
3	 3	Blue	 Blue / Prime Video / Random
4	 4	Top Menu	 D.Menu / Top
5	 5	Display	 Display / Media
6	 6	Pop Up / Menu	 Menu / Home
7	 7	Up	 Up
8	 8	Left	 Left
9	 9	Enter	 OK




























































 





Original	Substitut	Original	Substitut
Right	 Right	Mute	 Mute / Dimmer
Return	 Back / Return	Vol+	 Vol+
Down	 Down	Vol-	 Vol-
Options	 Setup / OPT /	Display	 Info / Angle
Home	 Smart / List		
Function	 AV / Input / RDS		
Sound Mode	 Sound / Title		
I<< / Preset-	 I<< / Preset-		
<- Replay	 CH- / Page-		
-> Advance	 CH+ / Page+		
>>I / Preset+	 >>I / Preset+		
<< / Tuning-	 << / Tune-		
Play	 Play / Slow		
>> / Tuning+	 >> / Tune+		
Scene Search	 +  Shift + Red / Netflix /		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		





Original	Substitut	Original	Substitut
 Power	 Power	 Tools	 Setup / OPT /
 1	 1	 Muting	 Mute / Dimmer
 2	 2	 Volume+	 Vol+
 3	 3	 Prog+	 CH+ / Page+
 4	 4	 Source	 AV / Input / RDS
 5	 5	 Volume-	 Vol-
 6	 6	 Prog-	 CH- / Page-
 7	 7	 [i+]	 Info / Angle
 8	 8		
 9	 9		
 Text	 Text / Goto		
 0	 0		
 -/--	 Shift + Guide / EPG / -/--		
 Digital	 Smart / List		
 Analog	 Display / Media		
 Guide	 Guide / EPG / -/--		
 Home / Menu	 Menu / Home		

Original	Substitut	Original	Substitut
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 SAT	 AUX	 REC MODE
 STEP-FREEZE	 HOLD	 PRESET-	 PRESET+
 HOLD	 EQ	 SURROUND	
 TUNE-	 SURROUND	 SOUND	 AUDIO
 TUNE+	 SUBTITLE	 FORMAT	 SIZE
 PRESET-	 TIMER	 PICTURE	 ZOOM
 PRESET+	 PROGRAM	 TOP MENU	 OPT-TOOLS
 TITLE	 TV RADIO	 D.MENU	 SETUP
 LANG UI	 RDS	 HOME	 TEXT
 EQ	 RDS	 MENU	 AV INPUT
 SURROUND	 RDS	 ANGLE	
 SOUND	 RDS	 OK	
 AUDIO	 RDS	 RETURN	
 SUBTITLE	 RDS	 EXIT	
 TIMER	 RDS	 CANCEL	
 PROGRAM	 RDS	 LIST	
TV RADIO	 RDS	SMART	
AV INPUT	 RDS	MEDIA	
		DISPLAY	
		TV	
		DVD	
		CD-STB	
		VIDEO	
		TAPE	
		TUNER	
		AUX-HDD	
		USB	
		BLUETOOTH	
		HDMI-BAT	
		PC	
		FAV MARKER	
		NETFLIX	
		APP	
		YouTube	
		Prime Video	
		SEARCH	
		REPEAT	
		REPEAT A-B	
		RANDOM	

