




Original	Substitut
	Mute / Dimmer
	TV/Radio /
	Power
	Picture / Format
	Pause / Step / Freeze
	Audio / Lang I/II
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info / Angle

Original	Substitut
	0
	Shift + 0
	AV / Input / RDS
	Menu / Home
	Up
	CH+ / Page+
	Exit / Cancel / Clear
	Left
	Vol-
	OK
	Vol+
	Right
	Down
	CH- / Page-
	Shift + CH- /
	I<< / Preset-
	>>I / Preset+



