













 











 












Original	Substitut
	Power
	Mute
	Play
	Pause
	Stop
	Rec
	<<
	>>
	Lang
	[=]..
	*1
	Text
	Google Play
	Source
	Menu
	Up
	i



 



 

 

 



 

 
 

 

 


Original	Substitut
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	Audio / Lang I/II
	Subtitle / EQ
	Picture / Format
	Text / Goto
	Shift + Green / APP / APP / REPEAT
	AV / Input / RDS
	Menu / Home
	Up
	Info / Angle

Original	Substitut
	Left
	OK
	Right
	EXIT
	Down
	←
	V+
	P+
	V-
	P-
	1
	2
	3
	4
	5
	6
	7

Original	Substitut
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7





	Original	Substitut		Original	Substitut
	8	 8			
	9	 9			
	[G]	 Guide / EPG / -/--			
	0	 0			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Home	 Shift + Menu /			
	Netflix	 Shift + Red / Netflix /			
	YouTube	 Shift + Yellow / YouTube /			
	prime video	 Shift + Blue / Prime			

