







Original	Substitut	Original	Substitut
 Power	 Power	 <	 I<< / Preset-
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 >	 >>I / Preset+
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Vol+	 Vol+
 9	 9	 Back	 Back / Return
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Info	 Info / Angle	 TV	 AV / Input / RDS
 PLUGIH	 Setup / OPT /	 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--	 Radio	 TV/Radio /
 Fav	 Fav / Marker / PC	 Radio	 Shift + 6

Original	Substitut	Original	Substitut
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 Play	 Pause	 Stop	 Red dot
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 HOME MENU	 ANGLE	 INFO
 CLEAR	 EXIT	 RETURN	 BACK
 EXIT	 LIST	 SMART	 CH PAGE
 CANCEL	 MEDIA	 DISPLAY	 VOL+
 VOL+	 TV	 DVD	 CD - STB
 VOL-	 VIDEO	 TAPE	 TUNER
 CH+	 Mandis	 4	 5
 CH-	 AUX - HDD	 6	 7
 VOL+	 USB	 8	 9
 VOL-	 BLUETOOTH	 HDMI - SAT	 PC
 CH+	 GUIDE EPG	 FAV MARKER	 NETFLIX
 CH-	 TV RADIO	 SEARCH	 APP
 VOL+	 RADIO	 REPEAT	 YouTube
 VOL-	 PROGRAM TV RADIO	 REPEAT A-B	 Prime Video
 CH+	 SHIFT + 6	 RANDOM	 Mandis SHOP
 CH-	 RADIO	 www.mandis.tv	



