

 





 

 

 

 

 

 



 
 
 

 

 
 
 

 

 

 

 

 

 
 
 

 

 

 

 

 



 



 

 

 

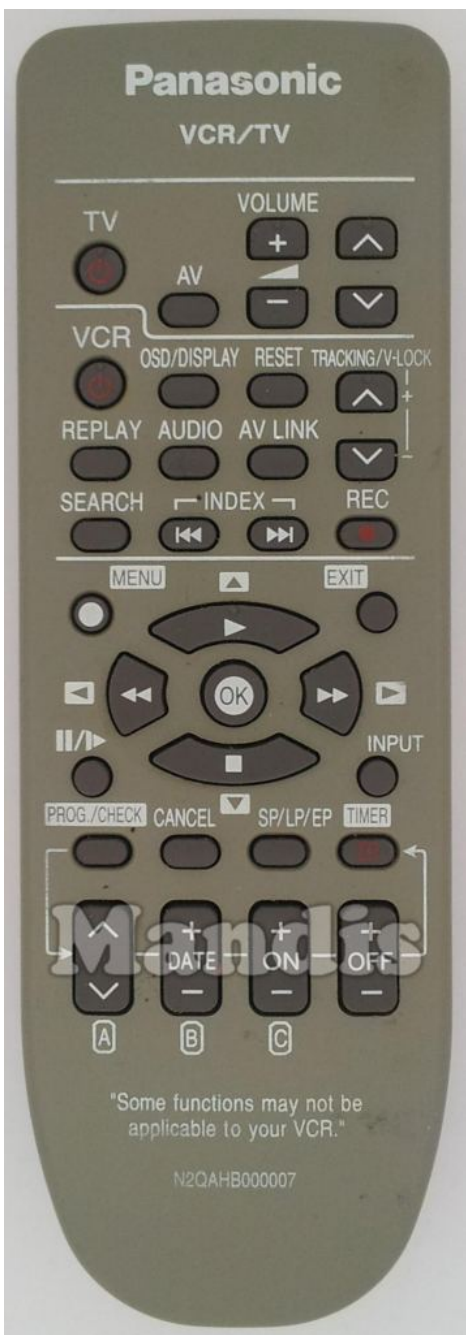 




Original	Substitut	Original	Substitut
 Power VCR	 Power	 CH- Tv	 Shift + CH- /
 Power Tv	 Shift + Power	 Menu	 Menu / Home
 Replay	 Blue / Prime Video / Random	 Input	 Smart / List
 OSD/Display	 Display / Media	 Reset	 Back / Return
 Exit	 Exit / Cancel / Clear	 Pause/Step	 Pause / Step / Freeze
 AV Link	 AV / Input / RDS	 OK	 OK
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 Search	 Red / Netflix / Search	 Down	 Down
 Rec	 Rec / Rec Mode	 Play	 Play / Slow
 Index >>I	 >>I / Preset+	 Up	 Up
 I<< Index	 I<< / Preset-	 Right	 Right
 Tracking-V-Lock	 CH+ / Page+	 >>	 >> / Tune+
 Tracking-V-Lock Down	 CH- / Page-	 <<	 << / Tune-
 AV Tv	 Shift + AV / Input / RDS	 Left	 Left
 Volume+ Tv	 Vol+	 Prog/Check	 TV/Radio /
 Volume- Tv	 Vol-	 Cancel	 Shift + Exit / Cancel / Clear
 CH+ Tv	 Shift + CH+ / Page+	 SP/LP/EP	 Picture / Format

Page+





	Original	Substitut	Original	Substitut
	Timer	Sleep / Timer		
	Prog/Check Up	+ Shift + Up		
	Prog/Check	+ Shift + Down		
	Date+	1		
	Date-	4		
	On+	2		
	On-	5		
	Off+	3		
	Off-	6		

