







 




Original	Substitut
 Standby	 Power
 Tv Operate	 Shift + Power
 CH+ Tv	 Shift + CH+ /
 Vol+ Tv	 Vol+
 Timer On/Off	 Sleep / Timer
 Input Select Tv	 Shift + AV / Input / RDS
 CH- Tv	 Shift + CH- /
 Vol- Tv	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Set	 Setup / OPT /
 SV/V+/Timer	 Picture / Format
 Left	 Left
 Right	 Right
 Down	 Down
 Clear	 Exit / Cancel / Clear
 <</REW	 << / Tune-

Original	Substitut
 Play/X2	 Play / Slow
 >>/FF	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/Still	 Pause / Step / Freeze
 Tape Speed	 Zoom / Size
 Audio Out	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Mode OSD	 Text / Goto
 4	 4
 5	 5
 6	 6
 Display	 Display / Media
 7	 7
 8	 8





	Original	Substitut
	9	 9
	Channel+	 CH+ / Page+
	-/--/AM/PM	 Guide / EPG / -/--
	0	 0
	Input Select	 AV / Input / RDS
	Channel-	 CH- / Page-
	TV/VCR	 TV/Radio /
	Skip Search	 Smart / List
	Zero Back	 Back / Return
	I>/Slow	 Yellow / YouTube / Repeat
	DPSS-	 I<< / Preset-
	DPSS+	 >>I / Preset+
	Lock	 Blue / Prime Video / Random

Original	Substitut

