



 

































Original	Substitut
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Substitut
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat







































Original	Substitut	Original	Substitut
REPEAT A-B	Repeat A-B		
PROGRAM	Program		
CLEAR	Clear		
TITLE	Title		
SHUFFLE	Shuffle		





Original	Substitut		
	Power		Power
	TV / Video		Setup / OPT /
	VCR		Shift + 4
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Display / Media
	Up		Up
	System Menu		Menu / Home

Original	Substitut		
	Left		Left
	OK		OK
	Right		Right
	I<<		I<< / Preset-
	Down		Down
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause / Step		Pause / Step / Freeze
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Input		AV / Input / RDS
	Record		Rec / Rec Mode
	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Title		Sound / Title
	Child Lock		Zoom / Size

