









Original	Substitut	Original	Substitut
 Power	 Power	 Page-	 CH- / Page-
 Mute	 Mute / Dimmer	 1	 1
 Pause	 Pause / Step / Freeze	 2	 2
 Menu	 Menu / Home	 3	 3
 Scan	 Smart / List	 4	 4
 Up	 Up	 5	 5
 Info	 Info / Angle	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 Exit	 Exit / Cancel / Clear	 0	 0
 Down	 Down	 Red/FAV	 Red / Netflix / Search
 Recall	 Fav / Marker / PC	 Green/SAT	 Green / APP / Repeat
 Vol+	 Vol+	 Yellow/Audio	 Yellow / YouTube / Repeat
 MP	 Display / Media	 Blue/Tv/Radio	 Blue / Prime Video / Random
 Page+	 CH+ / Page+		
 Vol-	 Vol-		

Original	Substitut	Original	Substitut
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 PLAY	 PAUSE	 STOP	 RED
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 AV INPUT
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE		
 MENU	 INFO		
 CLEAR	 RETURN		
 EXIT	 BACK		
 CANCEL	 LIST		
 VOL+	 SMART		
 VOL-	 MEDIA DISPLAY		
 TV	 CH PAGE		
1	DVD	CD-STS	
2	TAPE	TUNER	
3	VIDEO	Mandis	
4	AUX-HDD	USB	BLUETOOTH
5	7	8	9
6	HDMI-BAT	HDMI-BAT	PC
7	GUIDE EPG	0	FAV MARKER
8	NETFLIX	APP	YouTube
9	REPEAT	REPEAT A-B	Prime Video
0	SEARCH	REPEAT A-B	RANDOM
	Mandis SHOP		
	www.mandis.tv		

