









































































Original	Substitut	Original	Substitut
 Standby	 Power	 I<<	 I<< / Preset-
 Eject	 Eject / Surround	 >>	 >> / Tune+
 1	 1	 Play	 Play / Slow
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Return	 Back / Return
 9	 9	 Menu	 Menu / Home
 Goto	 Text / Goto	 Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode	 Title	 Sound / Title
 0	 0	 Add/Clear	 Fav / Marker / PC
 <<	 << / Tune-	 Angle	 Info / Angle
 Pause	 Pause / Step / Freeze	 P/N	 Guide / EPG / -/-
 Stop	 Stop / Hold	 Audio	 Audio / Lang I/II





Original	Substitut
 Slow	 +  Shift + Play /
 Zoom	 ZOOM Zoom / Size
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 I/P	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 Timer	 Sleep / Timer
 Disc/OP	 Smart / List
 Navigat	 D.Menu / Top
 USB	 +  Shift + 8
 TV	 TV/Radio /
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Prog	 +  Shift + TV/Radio / Program
 Edit	 Display / Media
 CH-	 CH- / Page-

Original	Substitut
 Vol-	 Vol-

