 

 















 



 







 



 







 



 

 









 

 











Original	Substitut	Original	Substitut
 Power	 Power	 Recall	 Smart / List
 Mute	 Mute / Dimmer	 Sub.PG	 Display / Media
 1	 1	 Down.PG	 CH- / Page-
 2	 2	 Up/CH+	 Up
 3	 3	 Vol-	 Vol-
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Vol+	 Vol+
 7	 7	 Right	 Right
 8	 8	 Scan	 Setup / OPT /
 9	 9	 Down/CH-	 Down
 -/--	 Guide / EPG / -/--	 Tv/AV	 AV / Input / RDS
 0	 0	 Play	 Play / Slow
 Recall	 Back / Return	 Pause	 Pause / Step / Freeze
 Size Aspect	 Zoom / Size	 Stop/DVB-Menu	 Stop / Hold
 Index	 Info / Angle	 Exit/Eject	 Exit / Cancel / Clear
 Up.PG	 CH+ / Page+	 Sleep/USB-C.R.	 Sleep / Timer





Original	Substitut	Original	Substitut
	I<</Info		I<< / Preset-
	Tv/Radio Setup		TV/Radio /
	↑ H+		Shift + Up
	Subtitle		Subtitle / EQ
	>>I/Guide		>>I / Preset+
	← V-		Shift + Left
	Menu Enter		Menu / Home
	→ V+		Shift + Right
	<</FAV		<< / Tune-
	Language/Display		Audio / Lang I/II
	↓ H-		Shift + Down
	TTX Search		Text / Goto
	Red		Red / Netflix / Search
	>>		>> / Tune+
	Green/Menu		Green / APP / Repeat
	Yellow/Audio		Yellow / YouTube / Repeat
	Blue/Title		Blue / Prime Video / Random

