




 

 

 
 
 





 
 








Original	Substitut
	Power
	Mute / Dimmer
	Play / Slow
	I<< / Preset-
	>>I / Preset+
	Picture / Format
	Sleep / Timer
	Setup / OPT /
	Sound / Title
	Audio / Lang I/II
	Up
	Left
	Right
	Down
	Vol+
	CH+ / Page+
	Vol-

Original	Substitut
	CH- / Page-
	1
	2
	Smart / List
	7
	8
	9
	SHIFT + DIMMER MUTE Shift + Mute / Dimmer

