





 

 







 

 

 

 

 

 

 

 

 








 

 



 




 





Original	Substitut
 Standby/On	 Power
 Eject	 Eject / Surround
 Index	 Info / Angle
 Rec Speed	 Setup / OPT /
 CLK/Count	 D.Menu / Top
 Picture	 Picture / Format
 Timer	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 Strobe	 Blue / Prime Video / Random
 Audio	 Audio / Lang I/II
 4	 4
 5	 5
 6	 6
 Art	 Text / Goto
 Input	 AV / Input / RDS

Original	Substitut
 7	 7
 8	 8
 9	 9
 +	 Vol+
 CH+	 CH+ / Page+
 100	 Guide / EPG / -/-
 0	 0
 CLR/RST	 Exit / Cancel / Clear
 -	 Vol-
 CH-	 CH- / Page-
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/Still	 Pause / Step / Freeze
 Display	 Display / Media





	Original	Substitut	
	Monitor	YouTube / Repeat	Yellow / YouTube / Repeat
	A.Dub		Sound / Title
	Input System		Red / Netflix / Search
	Up		Up
	Output System		Green / APP / Repeat
	Left		Left
	OK		OK
	Right		Right
	Auto		Smart / List
	Down		Down
	Menu		Menu / Home
	← Tracking		I<< / Preset-
	Tracking →		>>I / Preset+
	Slow-		Shift + Down
	Slow+		Shift + Up

	Original	Substitut

