 
 


 








| Original   | Substitut   | Original  | Substitut  |
|--|---|---|--|
|  Power    |  Power               |  >>        |  >> / Tune+         |
|  Input    |  AV / Input / RDS    |  V.Menu    |  D.Menu / Top       |
|  1        |  1                   |  Mute      |  Mute / Dimmer      |
|  2        |  2                   |  Up        |  Up                 |
|  3        |  3                   |  P+        |  CH+ / Page+        |
|  4        |  4                   |  Vol-      |  Vol-               |
|  5        |  5                   |  Left      |  Left               |
|  6        |  6                   |  Menu      |  Menu / Home        |
|  7        |  7                   |  OK        |  OK                 |
|  8        |  8                   |  Right     |  Right              |
|  9        |  9                   |  Vol+      |  Vol+               |
|  -/--    |  Guide / EPG / -/-- |  P-       |  CH- / Page-       |
|  0      |  0                 |  Down    |  Down             |
|  Pre-CH |  Fav / Marker / PC |  Display |  Display / Media  |
|  <<     |  << / Tune-        |  P.STD   |  Picture / Format |
|  Stop   |  Stop / Hold       |  Rec     |  Rec / Rec Mode   |
|  Play   |  Play / Slow       |  Eject   |  Eject / Surround |

| Original   | Substitut   | Original  | Substitut  |
|--|---|---|--|
|  Power    |  Power               |  >>        |  >> / Tune+         |
|  Input    |  AV / Input / RDS    |  V.Menu    |  D.Menu / Top       |
|  1        |  1                   |  Mute      |  Mute / Dimmer      |
|  2        |  2                   |  Up        |  Up                 |
|  3        |  3                   |  P+        |  CH+ / Page+        |
|  4        |  4                   |  Vol-      |  Vol-               |
|  5        |  5                   |  Left      |  Left               |
|  6        |  6                   |  Menu      |  Menu / Home        |
|  7        |  7                   |  OK        |  OK                 |
|  8        |  8                   |  Right     |  Right              |
|  9        |  9                   |  Vol+      |  Vol+               |
|  -/--    |  Guide / EPG / -/-- |  P-       |  CH- / Page-       |
|  0      |  0                 |  Down    |  Down             |
|  Pre-CH |  Fav / Marker / PC |  Display |  Display / Media  |
|  <<     |  << / Tune-        |  P.STD   |  Picture / Format |
|  Stop   |  Stop / Hold       |  Rec     |  Rec / Rec Mode   |
|  Play   |  Play / Slow       |  Eject   |  Eject / Surround |



