

Original	Substitut	Original	Substitut
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Reveal	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Update	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Info	 Info / Angle	6	 6
Menu Left	 Left	7	 7



POWER **DIMMER MUTE** **SHIFT**
TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE
 ▶ || ◻ ●
 TUNE- TUNE+ PRESET- PRESET+
 ◀ ▶ ◀ ▶
 TITLE LANG III EQ SURROUND
 SOUND AUDIO SUBTITLE ▲
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV/RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 CLEAR RETURN
 EXIT BACK
 CANCEL
 LIST
 + VOL - SMART +
 MEDIA CH
 DISPLAY PAGE
 TV DVD CD-DB
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 ◀-▶ HDMI-SAT PC
 GUIDE FAV
 EPG MARKER
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
Mandis
 shop
 www.mandis.tv