

| Original      | Substitut                                                                                               | Original      | Substitut                                                                                                   |
|---------------|---------------------------------------------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------------------------------|
| On/Off        |  Power                 | Progr/C/CH    |  TV/Radio /              |
| Audio Out     |  Mute / Dimmer         | Sp/Lp/Speed   |  D.Menu / Top            |
| Play          |  Play / Slow           | Erase         |  Setup / OPT /           |
| Pause         |  Pause / Step / Freeze | Video/Go-To   |  Text / Goto             |
| Stop          |  Stop / Hold           | Input Source  |  AV / Input / RDS        |
| Record        |  Rec / Rec Mode        | Menu          |  Menu / Home             |
| Rewind        |  << / Tune-            | Menu Up       |  Up                      |
| F.Forward     |  >> / Tune+            | Info/Intro    |  Info / Angle            |
| Prev.         |  I<< / Preset-         | Menu Left     |  Left                    |
| Next          |  >>I / Preset+         | OK Enter      |  OK                      |
| Otr/A.Otr     |  Sound / Title       | Menu Right    |  Right                 |
| Audio         |  Audio / Lang I/II   | Exit          |  Exit / Cancel / Clear |
| T.Set/Clock   |  Subtitle / EQ       | Menu Down     |  Down                  |
| Eject/Reverse |  Eject / Surround    | Counter Reset |  Back / Return         |
| PAL/Secam     |  Picture / Format    | Set+          |  Vol+                  |
| Case Tape     |  Zoom / Size         | Show View     |  Smart / List          |
| Timer/Record  |  Sleep / Timer       | Chan+         |  CH+ / Page+           |



| Original    | Substitut                                                                                                  |  |
|-------------|------------------------------------------------------------------------------------------------------------|--|
| Set-        |  Vol-                     |  |
| Display     |  Display / Media          |  |
| Chan-       |  CH- / Page-              |  |
| 1           |  1                        |  |
| 2           |  2                        |  |
| 3           |  3                        |  |
| 4           |  4                        |  |
| 5           |  5                        |  |
| 6           |  6                        |  |
| 7           |  7                        |  |
| 8           |  8                        |  |
| 9           |  9                       |  |
| -/--        |  Guide / EPG / -/--     |  |
| 0           |  0                      |  |
| VCR/TV      |  Fav / Marker / PC      |  |
| Skip/Search |  Red / Netflix / Search |  |
| Repeat      |  Green / APP / Repeat   |  |

| Original     | Substitut                                                                                                                                                                                               |  |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Rec/Mode     |  Blue / Prime Video / Random                                                                                         |  |
| On/Off       |  +  Shift + Power                 |  |
| Rec. On/Off  |  +  Shift + Rec / Rec Mode        |  |
| Next Sv+V    |  +  Shift + >>I / Preset+         |  |
| Mon/TV       |  +  Shift + TV/Radio / Program    |  |
| Slow/Dpss+   |  +  Shift + Up                    |  |
| Frame Down   |  +  Shift + Left                  |  |
| Slow/Dpss-   |  +  Shift + Down                  |  |
| Slow Down    |  +  Shift + CH- /                 |  |
| Once         |  +  Shift + 1                     |  |
| Daily        |  +  Shift + 2                     |  |
| Weekly       |  +  Shift + 3                     |  |
| Mark Add/Del |  +  Shift + Fav / Marker / PC |  |
|              |                                                                                                                                                                                                         |  |
|              |                                                                                                                                                                                                         |  |
|              |                                                                                                                                                                                                         |  |
|              |                                                                                                                                                                                                         |  |

