







 




















 
 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Eject/Tv Audio		Eject / Surround
	4		4
	5		5
	6		6
	Recall/Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Tv Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up

Original	Substitut	Original	Substitut
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVD Menu		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Sound		Sound / Title
	CH-		CH- / Page-
	Vol-		Vol-
	Pic		Picture / Format
	CH+		CH+ / Page+
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	DVD Setup		Setup / OPT /
	Back/Tv/Radio		Shift + Back / Return
	Text		Text / Goto





	Original	Substitut
	EPG	 Guide / EPG / -/--
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze
	Stop	 Stop / Hold
	FAV	 Fav / Marker / PC
	Info	 Info / Angle
	Red/DVD/USB	 Red / Netflix / Search
	Green/Title	 Green / APP / Repeat
	Yellow/PBC	 Yellow / YouTube / Repeat
	Blue/Angle	 Blue / Prime Video / Random
	<<	 << / Tune-
	>>	 >> / Tune+
	I<<	 I<< / Preset-
	>>I	 >>I / Preset+
	Return	 Back / Return
	Display	 Display / Media
	DVD Audio	 Audio / Lang I/II

	Original	Substitut
	Subtitle	 Subtitle / EQ
	Reveal	 Shift + Exit / Cancel / Clear
	Hold	 Shift + Stop /
	List	 Smart / List
	Index	 TV/Radio /
	Subpage	 Shift + Smart / List
	Size	 Zoom / Size
	Mix	 Shift + Display / Media
	Freeze	 Shift + Pause / Step /

