
 

 
 




 







Original	Substitut	Original	Substitut
	Power		Power
	TV/AV		AV
	TV/TXT		Text
	Cancel		Media
	Reveal		D. Menu
	DTV		Smart
	Hold		Options
	Size		Format
	Subpage		Shift + Subt
	Index		Shift + Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Channel List		List
	Mute		Mute
	EPG		Guide
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5





Original	Substitut	Original	Substitut
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
FAV	FAV	FAV PRE-CH	Pre Ch
PICTURE	Picture	SHIFT + PICTURE FORMAT	Shift + Format
RECALL	Recall	RETURN BACK	Back
SOUND	Sound	SOUND DUAL	Dual
SLEEP	Sleep	PROG SLEEP	Sleep
NICAM/A2	Nicam/A2	ZOOM	Eject
SUBTITLE	Subtitle	AD SUBT	Subt
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R
<<<	<<<	<<<	<<<
>>>	>>>	>>>	>>>
REPEAT	Repeat	SHIFT + REPEAT TEXT	Shift + Text
I<<<	I<<<	I<<<	I<<<

Original	Substitut	Original	Substitut
>>>I	>>>I	>>>I	>>>I
Play	Play	PLAY MODE	Play
Pause	Pause	Pause	Pause
ASPECT	Aspect	ECO 3D	3D

