






































 
































Original		Substitut		Original		Substitut	
	Power		Power		Tv/Radio		TV/Radio /
	Mute		Mute / Dimmer		i		Info / Angle
	USB/Media 1		Display / Media		Sleep		Sleep / Timer
	USB/Media 1		Shift + 8		Source		AV / Input / RDS
	Play/Pause/Text		Text / Goto		Menu		Menu / Home
	Play/Pause/Text		Play / Slow		Left		Left
	Play/Pause/Text		Pause / Step / Freeze		Up		Up
	Stop/Index		Stop / Hold		Right		Right
	Rec/Media2		Rec / Rec Mode		OK		OK
	Rec/Media2		Shift + Display / Media		Down		Down
	I<</Hold		I<< / Preset-		Mouse		Shift + OK
	>>I/Size		>>I / Preset+		Smart		Smart / List
	<</S. Page		<< / Tune-		Exit		Exit / Cancel / Clear
	>>/Reveal		>> / Tune+		CH+		CH+ / Page+
	I-II/Nicam		Shift + Picture / Format		EPG		Guide / EPG / -/-
	Audio		Audio / Lang I/II		VOL+		Vol+
	Subtitle		Subtitle / EQ		CH-		CH- / Page-





Original	Substitut	Original	Substitut
Open/Close	Eject / Surround	9	9
Vol-	Vol-	FAV	Fav / Marker / PC
D.Setup	Setup / OPT /	0	0
Picture	Picture / Format	Recall	Back / Return
D.Menu	D.Menu / Top	Red	Red / Netflix / Search
Sound	Sound / Title	Green	Green / APP / Repeat
D.Title	Shift + Sound / Title	Yellow	Yellow / YouTube / Repeat
P.Size	Zoom / Size	Blue	Blue / Prime Video / Random
D.Prog	Shift + TV/Radio / Program		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		

Original	Substitut	Original	Substitut
9	9	9	9
FAV	Fav / Marker / PC	0	0
Recall	Back / Return	Red	Red / Netflix / Search
Green	Green / APP / Repeat	Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random		

