


 


 





















 


 



 




 



 


 




 



 




Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Red	 Red
 Recall	 Back	 Green	 Green
 Game	 Media	 Yellow	 Yellow
 Auto	 Smart	 Blue	 Blue
 Info	 Info	 Zoom	 Eject

Original	Substitut	Original	Substitut
 Menu	 Menu	 TV	 AUX
 EPG	 Guide	 DVD	 SAT
 Exit	 Exit	 PLAY MODE	 REC MODE
 OK	 Ok	 PAUSE	 STOP
 Up	 Up	 REVERSE	 FAST FORWARD
 Down	 Down	 STOP	 PLAY
 Right	 Right	 SKIP BACKWARD	 SKIP FORWARD
 Left	 Left	 SOUND	 AD
 CH+	 Ch +	 DISC NAV	 SETTINGS
 CH-	 Ch -	 LIST	 OPT
 Vol+	 Vol +	 DUAL	 SUBT
 Vol-	 Vol -	 SEARCH	 PICTURE
 Red	 Red	 PROG	 ECO
 Green	 Green	 SLEEP	 3D
 Yellow	 Yellow	 TV/R	 FORMAT
 Blue	 Blue	 E-MANUAL	 TIMER
 Zoom	 Eject	 REPEAT	 ZOOM



