





| Original | Substitut | Original | Substitut |
|---|-----------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |

| Original | Substitut | Original | Substitut |
|---|-----------|---|-----------------------|
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |









| Original | Substitut |
|------------------------|-------------------------------|
| Freeze | Pause / Step / Freeze |
| Guide | Guide / EPG / -/-- |
| << | << / Tune- |
| >> / Aspect | >> / Tune+ |
| >> / Aspect | Shift + Picture / Format |
| << / Cancel | << / Preset- |
| << / Cancel | Shift + Exit / Cancel / Clear |
| >> / Sub.PG | >> / Preset+ |
| Stop / Index | Stop / Hold |
| Play/Pause / Timeshift | Play / Slow |
| Tv/Radio | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Reveal | Eject / Surround |
| Size | Zoom / Size |
| Hold | Shift + Stop / |
| Text | Text / Goto |
| Red | Red / Netflix / Search |

| Original | Substitut |
|----------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Cyan | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Substitut |
|---|-----------|
|  | Power |
|  | Mute |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | 0 |
|  | DTV/ATV |
|  | Recall |
|  | P.Mode |
|  | S.Mode |
|  | Sleep |

| Original | Substitut |
|---|-----------|
|  | Menu |
|  | Source |
|  | Up |
|  | Left |
|  | Enter |
|  | Right |
|  | Down |
|  | Exit |
|  | Display |
|  | Vol+ |
|  | Vol- |
|  | MTS |
|  | Rec List |
|  | CH+ |
|  | CH- |
|  | FAV/List |
|  | Rec |





| Original | Substitut | Original | Substitut |
|------------------------|-------------------------------|----------|-----------------------------|
| Freeze | Pause / Step / Freeze | Green | Green / APP / Repeat |
| Guide | Guide / EPG / -/-- | Yellow | Yellow / YouTube / Repeat |
| << | << / Tune- | Cyan | Blue / Prime Video / Random |
| >> / Aspect | >> / Tune+ | | |
| >> / Aspect | Shift + Picture / Format | | |
| << / Cancel | << / Preset- | | |
| << / Cancel | Shift + Exit / Cancel / Clear | | |
| >> / Sub.PG | >> / Preset+ | | |
| Stop / Index | Stop / Hold | | |
| Play/Pause / Timeshift | Play / Slow | | |
| Tv/Radio | TV/Radio / | | |
| Subtitle | Subtitle / EQ | | |
| Reveal | Eject / Surround | | |
| Size | Zoom / Size | | |
| Hold | Shift + Stop / | | |
| Text | Text / Goto | | |
| Red | Red / Netflix / Search | | |

