 
 
 


 



 

 
 



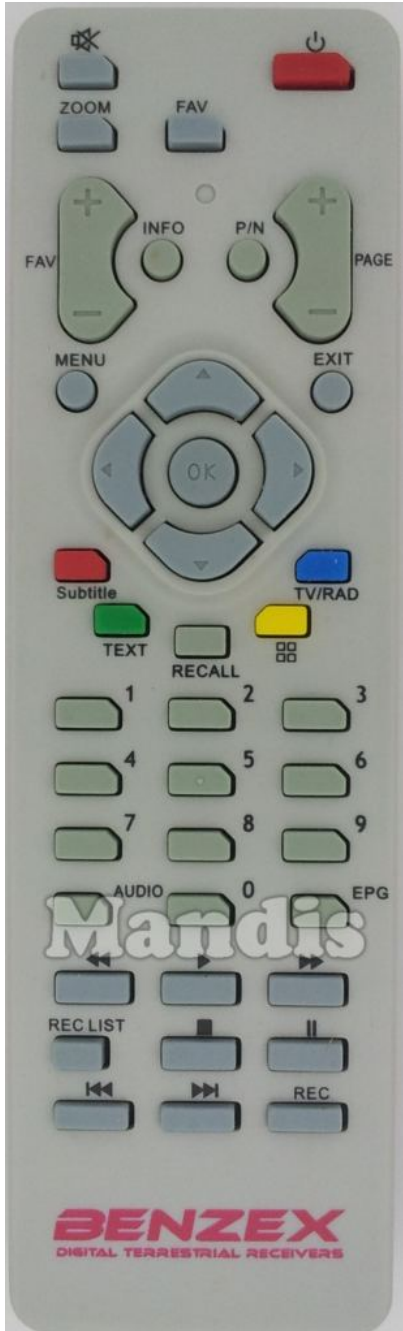


Original	Substitut	Original	Substitut
 Power	 Power	 Red	 Red
 Mute	 Mute	 Green	 Green
 Zoom	 Eject	 Yellow	 Yellow
 FAV	 Pre Ch	 Blue	 Blue
 FAV+	 Vol +	 Subtitle	 Subt
 FAV-	 Vol -	 Text	 Text
 Info	 Info	 [+]	 Options
 P/N	 Smart	 Tv/Radio	 TV/R
 Page+	 Ch +	 Recall	 Back
 Page-	 Ch -	 1	 1
 Menu	 Menu	 2	 2
 Exit	 Exit	 3	 3
 Up	 Up	 4	 4
 Down	 Down	 5	 5
 Right	 Right	 6	 6
 Left	 Left	 7	 7
 OK	 Ok	 8	 8

Original	Substitut	Original	Substitut
 Red	 Red	 Green	 Green
 Yellow	 Yellow	 Blue	 Blue
 Subtitle	 Subt	 Text	 Text
 [+]	 Options	 Tv/Radio	 TV/R
 Recall	 Back	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5
 6	 6	 7	 7
 8	 8		





	Original	Substitut	Original	Substitut
	9			
	0			
	Audio			
	EPG			
	<<			
	Play			
	>>			
	Stop			
	Pause			
	I<<			
	>>I			
	Rec			
	Rec List			

