





 

 
 
 
 
 
 

 
 
 


 
 

 
 

 
 
 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	Recall		Pre Ch
	Setup		Options
	EPG		Guide
	Source		AV

Original	Substitut	Original	Substitut
	CH.List		List
	Exit/Cancel		Exit
	FAV		Shift + Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+/Page+		Ch +
	CH-/Page-		Ch -
	S.Mode		Shift + Dual
	P.Mode		Format
	Vol+		Vol +
	Vol-		Vol -
	Record		Rec
	Record List		Smart
	Audio		Dual





Original	Substitut
S.TITLE	Subt
REVEAL	MENU
	3D
	Shift + Subt
	TEXT
	Play
	Pause
	Stop
	<<
	>>
	I<<
	>>I
	Red
	Green
	Yellow
	Blue
S.PAGE	D. Menu

Original	Substitut
	Back
	Shift + Down
	Shift + Up
	Eject
	Sleep
	Media
	TV/R

