
 
 
 
 







Original		Substitut		Original		Substitut	
	Standby		Power		Vol+		Vol +
	Open/Close		Eject		Vol-		Vol -
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Enter		Ok
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	Info/Display		Info		Blue		Blue
	Q-Play/Tv/Radio		TV/R		Next		>>
	Menu/PgDn		Menu		Prev		<<
	Setup		Options		Rew		<<
	Exit/Slow		Exit		FF		>>





Original	Substitut
Play	Play
Stop	Stop
Pause	Pause
Subtitle	Subt
Audio	Dual
List/PBC	List
Title/PgUp	D. Menu
Return	Back
Rec/Repeat	Rec
PVR/Zoom	Shift + Eject
FAV/A-B	Pre Ch
Video	AV
TTX/Search	Text
DVD/DVB	Media
Step	Format
EPG/P/N	Guide
Angle	3D

Original	Substitut
Random	Sleep
Mute	Mute
USB	Smart

