




















Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Substitut
 Menu	 Menu / Home
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Source	 AV / Input / RDS
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Home	 Shift + Menu /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mouse	 Smart / List
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-
 Aspect	 Shift + Picture / Format





Original	Substitut
SLEEP	TIMER SLEEP Sleep / Timer
REC	REC MODE Rec / Rec Mode
TV/RADIO	PROGRAM TV/RADIO TV/Radio /
FREEZE	SHIFT + STEP - FREEZE Shift + Pause / Step /
SUB-T	EQ SUBTITLE Subtitle / EQ
REC.LIST	SHIFT + REC MODE Shift + Rec / Rec Mode
ANGLE	SHIFT + ANGLE INFO Shift + Info / Angle
TTX	GOTO TEXT Text / Goto
HOLD	SHIFT + HOLD Shift + Stop /
REVEAL	SHIFT + RETURN BACK Shift + Back / Return
SUB-P	OPT-TOOLS SETUP Setup / OPT /
INDEX	SURROUND Eject/Index
ZOOM	SIZE ZOOM Zoom / Size
TSR	SLOW Play / Slow
TSR	STEP - FREEZE Pause / Step / Freeze
AUTO	HOLD Stop / Hold
<<<	TUNE- <<< / Tune-

Original	Substitut
>>>	TUNE+ >>> / Tune+
I<<<	PRESET- I<<< / Preset-
>>I	PRESET+ >>I / Preset+
Red/D.Setup	NETFLIX Red / Netflix / Search
Green/D.Menu	APP Green / APP / Repeat
Yellow/D.Title	YouTube Yellow / YouTube / Repeat
Blue/Repeat	Prime Video Blue / Prime Video / Random

