






Original	Substitut
 Standby	 Power
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Goto	 Text / Goto
 Rec	 Rec / Rec Mode
 0	 0
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Substitut
 I<<	 I<< / Preset-
 >>	 >> / Tune+
 Play	 Play / Slow
 >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Title	 Sound / Title
 Add/Clear	 Fav / Marker / PC
 Angle	 Info / Angle
 P/N	 Guide / EPG / -/-
 Audio	 Audio / Lang I/II





Original	Substitut
 Slow	 +  Shift + Play /
 Zoom	 ZOOM Zoom / Size
 Repeat	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ
 I/P	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 Timer	 Sleep / Timer
 Disc/OP	 Smart / List
 Navigat	 D.Menu / Top
 USB	 +  Shift + 8
 TV	 TV/Radio /
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Prog	 +  Shift + TV/Radio / Program
 Edit	 Display / Media
 CH-	 CH- / Page-

Original	Substitut
 Vol-	 Vol-

