














 




 



 
 
































 







 







 



 







 



 





















Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 TV	 Left	 Left	 Left
 DVD	 Mute / Dimmer	 Mute / Dimmer	 Mute / Dimmer
 SAT	 Play	 Play	 Play
 AUX	 Stop	 Stop	 Stop
 SLOW	 Previous	 Previous	 Previous
 STEP-FREEZE	 Next	 Next	 Next
 HOLD	 TITLE	 EQ	 SURROUND
 REC MODE	 LANG I/II	 EQ	 SURROUND
 TUNE-	 AUDIO	 SUBTITLE	 PROGRAM
 TUNE+	 FORMAT	 SLEEP	 TV RADIO
 PRESET-	 PICTURE	 ZOOM	 RDS
 PRESET+	 TOP MENU	 OPT-TOOLS	 GOTO
 MUTE	 D.MENU	 SETUP	 TEXT
 DIMMER	 HOME	 ANGLE	 INFO
 MUTE	 MENU	 OK	 OK
 SHIFT	 CLEAR	 EXIT	 EXIT
 TV	 CANCEL	 RETURN	 RETURN
 DVD	 LIST	 SMART	 SMART
SAT	VOL+	CH PAGE	CH PAGE
AUX	MEDIA DISPLAY	DISPLAY	DISPLAY
SLOW	TV	DVD	CD - BTB
STEP-FREEZE	1	2	3
HOLD	VIDEO	TAPE	TUNER
REC MODE	4	5	6
TUNE-	AUX - HDD	USB	BLUETOOTH
TUNE+	7	8	9
PRESET-	SLEEP	TIMER SLEEP	TIMER SLEEP
PRESET+	EPG	GUIDE EPG	GUIDE EPG
MUTE	NETFLIX	APP	YouTube
DIMMER	SEARCH	REPEAT	REPEAT A-B
MUTE	RANDOM	RANDOM	RANDOM








 


























 



 







 







 

 

 
















 





 

 

 








Original	Substitut	Original	Substitut
Green / >>	>> / Tune+		
Green / >>	Green / APP / Repeat		
Yellow / I<<	I<< / Preset-		
Yellow / I<<	Yellow / YouTube / Repeat		
Blue / >>I	>>I / Preset+		
Blue / >>I	Blue / Prime Video / Random		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Play / Slow		
Text / Play/Pause	Pause / Step / Freeze		
Stop / Still	Stop / Hold		
Radio	TV/Radio /		
Size / Aspect	Picture / Format		
Size / Aspect	Zoom / Size		
[≡x]	Eject / Surround		
Subtitle / [≡o]	Subtitle / EQ		
DMP	D.Menu / Top		
Rec	Rec / Rec Mode		





Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-



