




















 

















 

















 













Original	Substitut	Original	Substitut
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Substitut	Original	Substitut
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 ANGLE	 INFO	
 OK	 OK	 OK	 OK
 EXIT	 RETURN	 BACK	
 CANCEL	 LIST	 SMART	 CH PAGE
 VOL +	 MEDIA	 DISPLAY	 TV
 VOL -	 DISPLAY	 TV/RADIO	 DVD
 TV	 VIDEO	 CD - STB	 TAPE
 1	 4	 5	 6
2	7	8	9
3	AUX - HDD	USB	BLUETOOTH
4	HDMI - BAT	PC	
5	GUIDE EPG	FAV	MARKER
6	NETFLIX	APP	YouTube
7	SEARCH	REPEAT	Prime Video
8	REPEAT A-B	SEARCH	REPEAT
9		REPEAT A-B	RANDOM
0			





Original		Substitut	
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	PVR/Hold		Setup / OPT /
	Size		Zoom / Size
	FAV		Fav / Marker / PC
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Auto		Stop / Hold
	Reveal		D.Menu / Top
	Subtitle		Subtitle / EQ
	<</Nicam		<< / Tune-
	>>/Freeze		>> / Tune+
	<</Index		<< / Preset-

Original		Substitut	
	>> /Subpage		>> / Preset+

