 






 



 
 





 



 



 



 








 



 










 




















Original	Substitut	Original	Substitut
 Power	 Power	 Goto	 Text / Goto
 Mute	 Mute / Dimmer	 Home	 Shift + Menu /
 Red/Sub.	 Red / Netflix / Search	 Up	 Up
 Green/TTX	 Green / APP / Repeat	 Menu	 Menu / Home
 Yellow/Audio	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 EPG	 Guide / EPG / -/--	 Right	 Right
 Info	 Info / Angle	 Back	 Back / Return
 Tv/Radio	 TV/Radio /	 Down	 Down
 Rec	 Rec / Rec Mode	 Del	 Exit / Cancel / Clear
 DTV	 Smart / List	 >>	 >>  / Preset+
 Video	 Shift + 4	 Vol+	 Vol+
 Music	 Audio / Lang I/II	 >>	 >> / Tune+
 Picture	 Picture / Format	  <<	  << / Preset-
 APP	 Shift + Green / APP /	 Vol-	 Vol-
 Setting	 Setup / OPT /	 <<	 << / Tune-
 Web	 Display / Media	 1	 1

Original	Substitut	Original	Substitut
 Goto	 Text / Goto	 Home	 Shift + Menu /
 Up	 Up	 Menu	 Menu / Home
 Left	 Left	 OK	 OK
 Right	 Right	 Back	 Back / Return
 Down	 Down	 Del	 Exit / Cancel / Clear
 >>	 >>  / Preset+	 Vol+	 Vol+
 >>	 >> / Tune+	  <<	  << / Preset-
 Vol-	 Vol-	 <<	 << / Tune-
 1	 1		



