
 


 




 
 

 
 

 
 
 


 




 

 

 






 



 
 


 
 

 





 

 
 
 


 

 









 



 





 

 

 






 

 


 
 




Original		Substitut		Original		Substitut	
	Power		Power		Menu		Menu
	[i]/Info		Info		Red/1/Return		Red
	Mute		Mute		Green/↓/Subtitle		Green
	I-II		Dual		Yellow/Audio		Yellow
	OK/Select		Ok		Blue/Angle		Blue
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		P+		Ch +
	6		6		P-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Play		Play
	0		0		Pause		Pause
	-/-/+10	 + 	Shift + Guide		Stop		Stop
	Exit		Exit		<<		<<








 

 










 
 


 
 
 
 
 
 
 
 
 




 

 
 



 
 


 



 
 


 
 





 








	Original	Substitut	Original	Substitut
	>>	 >>		
	[TV]	 TV/R		
	D-Menu	 Smart		
	TV	 Media		
	AV	 AV		
	P<P	 Pre Ch		
	PP	 D. Menu		
	[≡]	 Text		
	[≡o]	 Subt		
	[≡+]	 Format		
	[≡x]	 3D		
	[≡◆]/Wide	 +  Shift + Format		
	[≡?]	 Options		
	[≡i]/Guide	 Guide		
	[::]/Subtitle	 Back		





Original		Substitut		Original		Substitut	
	Power		Power		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		D-Menu		Smart
	4		4		<<		<<
	5		5		>>		>>
	6		6		I<<		I<<
	7		7		>>I		>>I
	8		8		Time		Shift + AV
	9		9		Zoom		Shift + Eject
	0		0		Program		Sleep
	-/--/+10		Guide		Search Mode		AV
	Exit		Exit		Repeat		Text
	Red/↑/Return		Red		A-B		Shift + Play
	Green/↓/Subtitle		Green		C		Yellow
	Yellow/Audio		Shift + Yellow		Title		Info
	Blue/Angle		Blue		Display		Shift + Info



