 
 














 

 


 


Original		Substitut		Original		Substitut	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Eco		3D
	Input HEOS		6		Mute		Mute
	Input Internet Radio		7		Volume +		Vol +
	Input CBL/SAT		8		Volume -		Vol -
	Input DVD		9		Info		Info
	Input Blu-ray		Guide		Option		Options
	Input Aux1		0		Setup		Menu
	Input Game		Pre Ch		Back		Back
	Input Aux2		Shift + Smart		Back		Exit
	Input Media		Media		Up		Up
	Input CD		Smart		Down		Down
	Quick Select 1		D. Menu		Right		Right







 
 





 


 



 


Original	Substitut
	 Left
	 Ok
	 I<< / Tune -
	 Play
	 >>I / Tune +
	 <<
	 Pause
	 Stop
	 >>
	 Green / Sound Mode Movie
	 Red / Sound Mode Music
	 Blue / Sound Mode Game
	 Yellow / Sound Mode Pure
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4

Original	Substitut
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0
	 Shift + Pre Ch
	 Sleep

 










 












 
 











 







Original		Substitut		Original		Substitut	
	Power		Power		Quick Select 2		Text
	Input TV Audio		1		Quick Select 3		Eject
	Input Tuner		2		Quick Select 4		AV
	Input Bluetooth		3		CH + / Page +		Ch +
	Input Phono		4		CH - / Page -		Ch -
	Input USB		5		Mute		Mute
	Input HEOS		6		Volume +		Vol +
	Input Internet Radio		7		Volume -		Vol -
	Input CBL/SAT		8		Up		Up
	Input DVD		9		Down		Down
	Input Blu-ray		Guide		Right		Right
	Input Aux1		0		Left		Left
	Input Game		Pre Ch		Enter		Ok
	Input Aux2		Shift + Smart		Back		Back
	Input Media		Media		Back		Exit
	Input CD		Smart		I<< / Tune -		I<<
	Quick Select 1		D. Menu		Play		Play





	Original	Substitut	Original	Substitut
	>>I / Tune +		>>I	
	<<		<<	
	Pause		Pause	
	Stop		Stop	
	>>		>>	
	1	 + 	Shift + 1	
	2	 + 	Shift + 2	
	3	 + 	Shift + 3	
	4	 + 	Shift + 4	
	5	 + 	Shift + 5	
	6	 + 	Shift + 6	
	7	 + 	Shift + 7	
	8	 + 	Shift + 8	
	9	 + 	Shift + 9	
	0	 + 	Shift + 0	
	Enter	 + 	Shift + Pre Ch	
	Sleep		Sleep	





Original		Substitut		Original		Substitut	
1	Quick Select 1	E-MANUAL D.MENU	D. Menu	GAME	Input Game	FAV PRE-CH	Pre Ch
ENTER	Enter	SHIFT + FAV PRE-CH	Shift + Pre Ch	AUX2	Input Aux2	SHIFT + HOME SMART	Shift + Smart
4	Quick Select 4	TIMER AV	AV	MEDIA PLAYER	Input Media	APP MEDIA	Media
3	Quick Select 3	ZOOM ▲	Eject	CD	Input CD	HOME SMART	Smart
2	Quick Select 2	REPEAT TEXT	Text	CH / PAGE ▲	CH + / Page +	+ CH	Ch +
POWER	Power	POWER	Power	CH / PAGE ▼	CH - / Page -	CH -	Ch -
TV AUDIO	Input TV Audio	1	1	MUTE 🔇	Mute	MUTE	Mute
TUNER	Input Tuner	2	2	VOLUME ▲	Volume +	+ VOL	Vol +
Bluetooth	Input Bluetooth	3	3	VOLUME ▼	Volume -	VOL -	Vol -
PHONO	Input Phono	4	4	▲	Up	▲	Up
USB	Input USB	5	5	▼	Down	▼	Down
HEOS	Input HEOS	6	6	▶	Right	▶	Right
INTERNET RADIO	Input Internet Radio	7	7	BACK	Back	CLEAR EXIT	Exit
CBL/SAT	Input CBL/SAT	8	8	◀	Left	◀	Left
DVD	Input DVD	9	9	ENTER	Enter	OK	Ok
Blu-ray	Input Blu-ray	GUIDE	Guide	BACK	Back	RETURN BACK	Back
AUX1	Input Aux1	0	0	TUNE - ◀◀	I<< / Tune -	◀◀	I<<





Original	Substitut	Original	Substitut
	Play		Play
	>>I / Tune +		>>I
	<<		<<
	Pause		Pause
	1		Shift + 1
	2		Shift + 2
	3		Shift + 3
	4		Shift + 4
	5		Shift + 5
	6		Shift + 6
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0
	Stop		Stop
	>>		>>
	Sleep		Sleep

