 




Original	Substitut	Original	Substitut
 P100	Display / Media	 AV	AV / Input / RDS
 Power	Power	 0	0
 REV	<< / Tune-	 -/--	Guide / EPG / -/--
 Doub	Audio / Lang I/II	 + P	CH+ / Page+
 1	1	 + P	Up
 2	2	 Mute	Mute / Dimmer
 3	3	 TV/TXT	TV/Radio /
 Hold	Stop / Hold	 MENU	Menu / Home
 4	4	 - VOL	Left
 5	5	 - VOL	Vol-
 6	6	 OK	OK
 Sub	Subtitle / EQ	 VOL +	Right
 Update	D.Menu / Top	 VOL +	Vol+
 7	7	 SWP	Back / Return
 8	8	 P -	CH- / Page-
 9	9	 P -	Down
 Mix	Text / Goto	 16:9	Picture / Format





	Original	Substitut	Original	Substitut
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Violet	 Smart / List		
	[]	 Setup / OPT /		
	♪	 Sound / Title		
	PP	 Shift + Smart / List		

