



Original	Substitut
	Mute / Dimmer
	Picture / Format
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0	0
SWAP	Back / Return
SWAP	D.Menu / Top
PC	Fav / Marker / PC

Original	Substitut
	TV/Radio /
	Menu / Home
	Text / Goto
	Up
	Left
	OK
	Right
	Down
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Info / Angle





Original	Substitut
	[?]  Smart / List
	[+]  Zoom / Size
	[◆]  Display / Media
	[≡x]  Eject / Surround
	[:≡]  Guide / EPG / -/-
	[]  Subtitle / EQ
	♪  Sound / Title

Original	Substitut

