







 







 

 





 





 







Original	Substitut	Original	Substitut
	Power		Power
	TV		Fav / Marker / PC
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/--
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	ALT		Setup / OPT /
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i		Info / Angle
	Up		Up
	Down		Down
	Vol+		Vol+

Original	Substitut	Original	Substitut
	Right		Right
	Vol-		Vol-
	Left		Left
	OK		OK
	Page+		CH+ / Page+
	Page-		CH- / Page-
	Freeze		Pause / Step / Freeze
	Browse		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original	Substitut	Original	Substitut
	0		0
	Text		Text / Goto
	SUB		Subtitle / EQ

