





















 

 

 

 

 







Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Substitut	Original	Substitut
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-












 
 


















Original	Substitut	Original	Substitut
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>	 >>  / Preset+		
 [≡]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [≡+]	 Zoom / Size		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [≡◆]/[++]	 Setup / OPT /		
 [≡x]	 Picture / Format		
 [≡o]/Subtitle	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		







Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Substitut
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Substitut	Original	Substitut
		6		6
		7		7
		8		8
		9		9
		EPG		Guide / EPG / -/--
		0		0
		Fav		Fav / Marker / PC
		Red / <<		Red / Netflix / Search
		Green / >>		Green / APP / Repeat
		Yellow /  <<		Yellow / YouTube / Repeat
		Blue / >>		Blue / Prime Video / Random
		Text / Play/Pause		Shift + Play /
		Red / <<		Shift + Red / Netflix /
		Green / >>		Shift + Green / APP /
		Yellow /  <<		Shift + Yellow / YouTube /
		Blue / >>		Shift + Blue / Prime

