




Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡o]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡+]		I<< / Preset-
	>>I/[≡..]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Smart / List
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze

Original	Substitut	Original	Substitut
	Info		Info / Angle
	[I]/Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	REP/Rec		Rec / Rec Mode
	CH-		CH- / Page-
	1		1





Original	Substitut	Original	Substitut
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
0	0	HDMI - SAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Original	Substitut

 
 




Original	Substitut	
Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<</Hold		<< / Tune-
>>/Index		>> / Tune+
I<<		I<< / Preset-
>>I		>>I / Preset+
Nicam/A2		Audio / Lang I/II
Subtitle		Subtitle / EQ
Subpage		Eject / Surround
Size		Zoom / Size
Sleep		Sleep / Timer
DTV/Radio		TV/Radio /
Reveal		D.Menu / Top

Original	Substitut	
TXT/MIX		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
Enter		OK
Right		Right
Cancel		Exit / Cancel / Clear
Down		Down
Back		Back / Return
Vol+		Vol+
List		Smart / List
CH+		CH+ / Page+
Vol-		Vol-
Mode		Display / Media
CH-		CH- / Page-
1		1



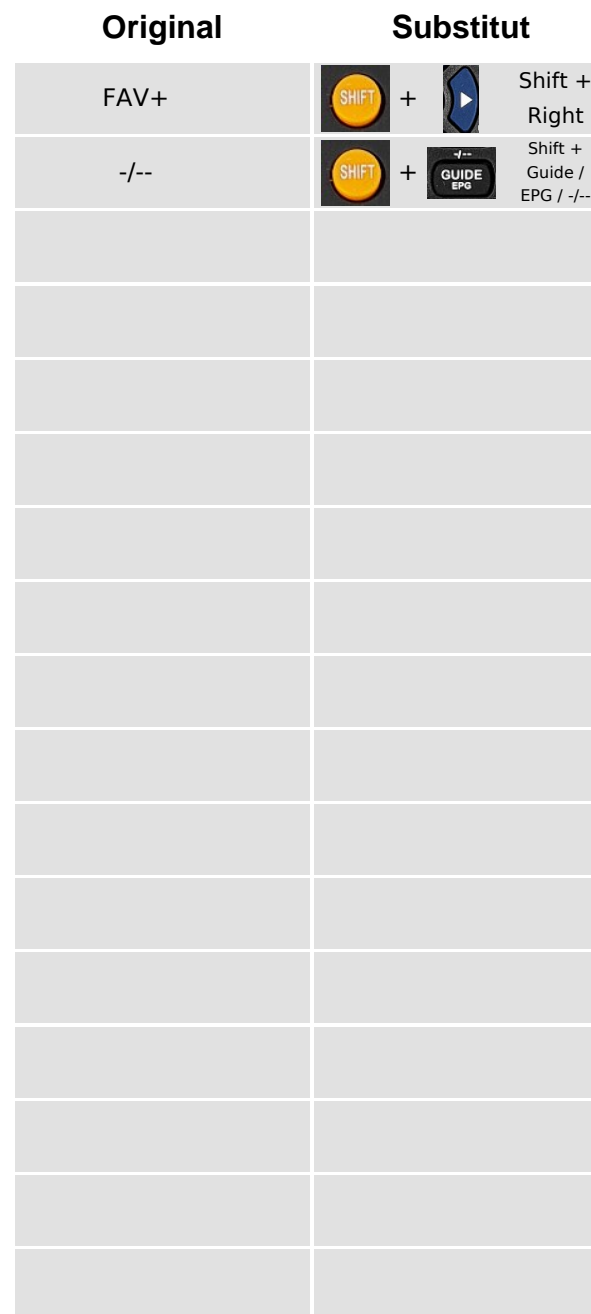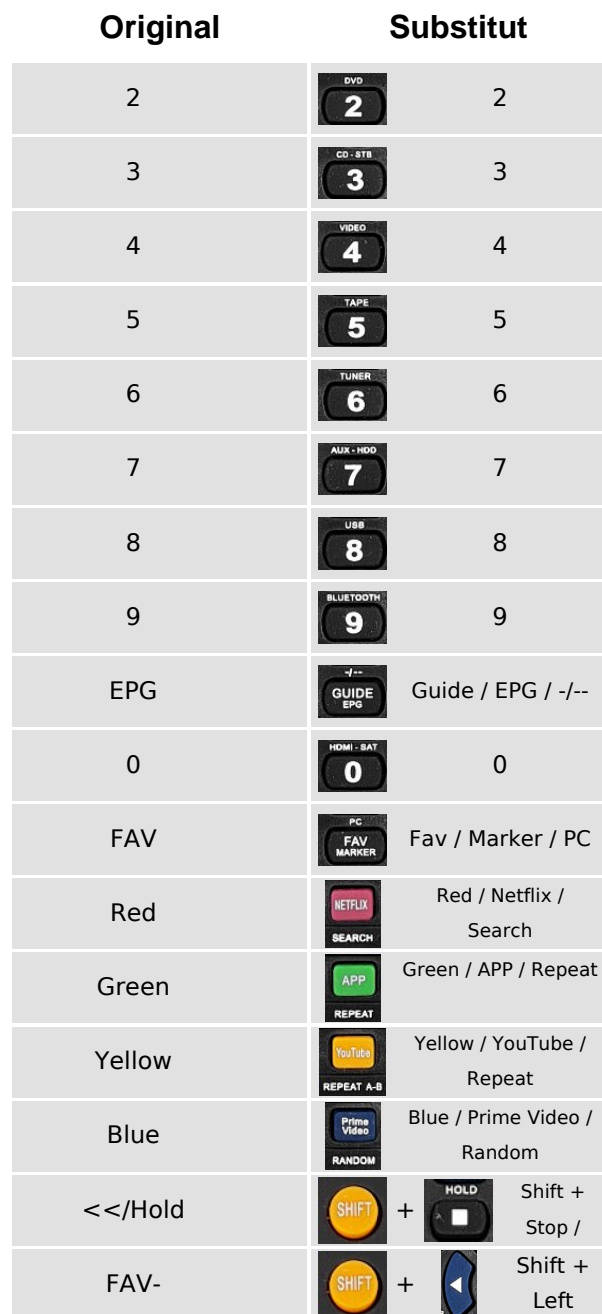







 






 


Original	Substitut
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</[Timer]	 << / Tune-
>>/[≡?]	 >> / Tune+
I<</[≡↓]	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
I<</[≡↓]	 Zoom / Size
<</[Timer]	 Sleep / Timer
Text	 Text / Goto
Source/Av	 AV / Input / RDS
[II]	 Menu / Home

Original	Substitut
Up	 Up
Info	 Info / Angle
Left	 Left
Ok	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Recall	 Back / Return
Vol+	 Vol+
[≡i]	 Smart / List
Ch+	 CH+ / Page+
Vol-	 Vol-
Ch-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4





Original	Substitut	
5	 5	5
6	 6	6
7	 7	7
8	 8	8
9	 9	9
Epg	 Guide / EPG / -/--	
0	 0	0
Fav	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
Freeze	 +  Shift + Pause / Step /	

Original	Substitut

