







 



 







 



 



 



 







 

 

 

 



 





 

 































Original	Substitut	Original	Substitut
 Standby	 Power	 Down / CH-	 Down
 DTV/VCR	 AV / Input / RDS	 Recall	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 1	 1
 Info	 Info / Angle	 2	 2
 TV / Radio	 Pause / Step / Freeze	 3	 3
 Menu	 Menu / Home	 TTX	 Display / Media
 EPG	 Guide / EPG / -/--	 4	 4
 Exit	 Exit / Cancel / Clear	 5	 5
 Up / CH+	 Up	 6	 6
 Up / CH+	 CH+ / Page+	 OPT	 Back / Return
 Left / Vol-	 Left	 7	 7
 Left / Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9
 Right / Vol+	 Right	 0	 0
 Right / Vol+	 Vol+	 Red	 TV/Radio /
 Fav	 Smart / List	 Green	 Audio / Lang I/II
 Down / CH-	 CH- / Page-	 Yellow	 Subtitle / EQ





Original	Substitut	Original	Substitut
	Blue		Text / Goto
	Reclist		Red / Netflix / Search
	Slow		Green / APP / Repeat
	Play		Yellow / YouTube / Repeat
	Pause		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+

Original	Substitut	Original	Substitut

