 

 


 

 

 
 
 


 




 



 



 
 
 










 
 
 
 
 
 

 
 
 

 




 


 



 
 







Original	Substitut	Original	Substitut
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Mute		Mute
	Internet		Smart
	Vol +		Vol +
	Vol -		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Q. Menu		D. Menu
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	i / Info		Info
	Music/Photo/Photo		Options
	Guide		Guide
	[=] / Text		Text
	*/O		Format





Original		Substitut		Original		Substitut	
	* / Q		3D				
	Red		Red				
	Green		Green				
	Yel l ow		Yel l ow				
	Bl ue		Bl ue				
	Lang		Dual				
	[≡] . .		Subt				
	Rec		Rec				
	[- o -]		Ej ect				
	Pl ay		Pl ay				
	St op		St op				
	Pause		Pause				
	<<		<<				
	>>		>>				

