



 







 














 



| Original   | Substitut   | Original  | Substitut   |
|--|---|---|---|
|  Power    |  Power                   |  Vol-              |  Vol-                        |
|  Source   |  AV / Input / RDS        |  World/Internet    |  Smart / List                |
|  1        |  1                       |  PR-               |  CH- / Page-                 |
|  2        |  2                       |  Menu              |  Menu / Home                 |
|  3        |  3                       |  Q.Menu            |  D.Menu / Top                |
|  4        |  4                       |  Up                |  Up                          |
|  5        |  5                       |  Left              |  Left                        |
|  6        |  6                       |  OK                |  OK                          |
|  7        |  7                       |  Right             |  Right                       |
|  8        |  8                       |  Down              |  Down                        |
|  9       |  9                      |  Back             |  Back / Return              |
|  TV     |  TV/Radio /            |  Exit            |  Exit / Cancel / Clear     |
|  0      |  0                     |  i               |  Info / Angle              |
|  Recall |  Shift + Back / Return |  Camera/Music/Ph |  Picture / Format          |
|  Vol+   |  Vol+                  |  Guide           |  Guide / EPG / -/-         |
|  Mute   |  Mute / Dimmer         |  */o             |  Shift + Guide / EPG / -/- |
|  PR+    |  CH+ / Page+           |  */o..           |  Fav / Marker / PC         |

| Original   | Substitut   | Original  | Substitut   |
|--|---|---|---|
|  Power    |  DIMMER MUTE |  TV            |  DVD             |
|  Source   |  SHIFT       |  SAT           |  AUX             |
|  1        |  SLOW        |  STEP-FREEZE   |  HOLD            |
|  2        |  REC MODE    |  TUNE-         |  TUNE+           |
|  3        |  PRESET-     |  PRESET+       |  TITLE           |
|  4        |  LANG        |  EQ            |  SURROUND        |
|  5        |  SOUND       |  AUDIO         |  SUBTITLE        |
|  6        |  FORMAT      |  SIZE          |  TIMER           |
|  7        |  PICTURE     |  ZOOM          |  PROGRAM         |
|  8        |  TOP MENU    |  OPT-TOOLS     |  GOTO            |
|  9       |  D.MENU      |  RDS           |  AV INPUT        |
|  TV     |  HOME        |  ANGLE         |  MENU            |
|  0      |  INFO        |  OK            |  RETURN          |
|  Recall |  CLEAR       |  EXIT          |  BACK            |
|  Vol+   |  CANCEL      |  LIST          |  SMART           |
|  Mute   |  VOL+       |  MEDIA        |  DISPLAY        |
|  PR+    |  TV        |  CH PAGE     |  DVD           |
|  |  1         |  2           |  CD - STB      |
|  |  2         |  3           |  VIDEO         |
|  |  3         |  4           |  TAPE          |
|  |  4         |  5           |  TUNER         |
|  |  5         |  6           |  AUX - HDD     |
|  |  6         |  7           |  USB           |
|  |  7         |  8           |  BLUETOOTH     |
|  |  8         |  9           |  HDMI - SAT    |
|  |  9         |  0           |  PC            |
|  |  0         |  FAV MARKER  |  GUIDE EPG     |
|  |  NETFLIX   |  APP         |  YouTube       |
|  |  SEARCH    |  REPEAT      |  REPEAT A-B    |
|  |  RANDOM    |  Mandis SHOP |  www.mandis.tv |





| Original   | Substitut   | Original | Substitut |
|--|---|----------|-----------|
|  [≡]/Text |  Text / Goto                 |          |           |
|  Red      |  Red / Netflix / Search      |          |           |
|  Green    |  Green / APP / Repeat        |          |           |
|  Yellow   |  Yellow / YouTube / Repeat   |          |           |
|  Blue     |  Blue / Prime Video / Random |          |           |
|  Lang     |  Audio / Lang I/II           |          |           |
|  [≡]..    |  Shift + Text /              |          |           |
|  [-o-]    |  Setup / OPT /               |          |           |
|  <<       |  << / Tune-                  |          |           |
|  Pause    |  Pause / Step / Freeze       |          |           |
|  >>      |  >> / Tune+                 |          |           |
|  Rec    |  Rec / Rec Mode            |          |           |
|  Play   |  Play / Slow               |          |           |
|  Stop   |  Stop / Hold               |          |           |
|  |   |          |           |
|  |   |          |           |
|  |   |          |           |

