
 







 

 

 

 




Original	Substitut
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
	Menu / Home
	Info / Angle
I-II	Audio / Lang I/II

Original	Substitut
	Mute / Dimmer
	Left
	Up
	Right
OK	OK
	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
	Red / Netflix / Search
	Red / Sound / Title
	Green / APP / Repeat
	Green / Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Original	Substitut
[≡o]	TIMER SLEEP Sleep / Timer
Hold	HOLD Stop / Hold
[≡X]	CLEAR EXIT CANCEL Exit / Cancel / Clear
Mix / PIP Swap	LIST SMART Smart / List
PIP / Size	SIZE ZOOM Zoom / Size
PIP Down / [≡?]	PRESET- I<< / Preset-
PIP Up / Index	PRESET+ >>I / Preset+
[TV]	PROGRAM TV/RADIO TV/ Radio /
[AV]	RDS AV INPUT AV / Input / RDS

Original	Substitut

