



	Original	Substitut		Original	Substitut
	 Standby	 Power		 HDD/DVD	 Media
	 Open / Close	 Eject		 Up	 Up
	 1	 1		 Left	 Left
	 2	 2		 Select	 Ok
	 3	 3		 Right	 Right
	 4	 4		 Down	 Down
	 5	 5		 Setup	 Options
	 6	 6		 TV/DVD	 Smart
	 7	 7		 Video Source	 AV
	 8	 8		 Function	 D. Menu
	 9	 9		 Playlist+	 Vol +
	 0	 0		 Playlist-	 Vol -
	 Search	 Shift + TV/R		 Watch TV	 TV/R
	 Clear	 Exit		 Play/Pause	 Play
	 Program+	 Ch +		 Play/Pause	 Pause
	 Program-	 Ch -		 Stop	 Stop
	 Return	 Back		 Record/DUB	 Rec

	Original	Substitut		Original	Substitut
	 Standby	 Power		 HDD/DVD	 Media
	 Open / Close	 Eject		 Up	 Up
	 1	 1		 Left	 Left
	 2	 2		 Select	 Ok
	 3	 3		 Right	 Right
	 4	 4		 Down	 Down
	 5	 5		 Setup	 Options
	 6	 6		 TV/DVD	 Smart
	 7	 7		 Video Source	 AV
	 8	 8		 Function	 D. Menu
	 9	 9		 Playlist+	 Vol +
	 0	 0		 Playlist-	 Vol -
	 Search	 Shift + TV/R		 Watch TV	 TV/R
	 Clear	 Exit		 Play/Pause	 Play
	 Program+	 Ch +		 Play/Pause	 Pause
	 Program-	 Ch -		 Stop	 Stop
	 Return	 Back		 Record/DUB	 Rec





Original		Substitut	
	I<< Skip		I<<
	Skip >>I		>>I
	<< Search		<<
	Search >>		>>
	Edit		Red
	Insert CHP.		Green
	Rec Mode	+	Shift + Rec
	Timer	+	Shift + AV
	Play Mode	+	Shift + Play
	Repeat		Text
	Zoom	+	Shift + Eject
	A-B	+	Shift + Text
	Subtitle		Subt
	Audio		Dual
	Angle		Format
	Title		List
	Menu		Menu

Original		Substitut	
	Display		Info

