

 

















 




 


 

 


 

 


Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original	Substitut	Original	Substitut
	Guide		Guide
	?		Dual
	Exit		Exit
	Menu		Menu
	Tools		Options
	Back		Back
	@		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV
	P+		Ch +





	Original	Substitut	Original	Substitut
	P-	 CH -		
	I<	 I<<		
	>I	 >>I		
	<<	 <<		
	>>	 >>		
	Rec	 REC MODE Rec		
	Play	 PLAY MODE Play		
	Pause	 Pause		
	Stop	 Stop		
	3D	 ECO 3D		
	OQ	 PICTURE FORMAT Format		
	[...].	 AD SUBT Subt		
	Netflix	 SHIFT +  APP MEDIA Shift + Media		
	My Media	 APP MEDIA Media		

