





 



































 





 







 

 































 







 







Original	Substitut	Original	Substitut
 Power	 Power	 i	 Info / Angle
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 TV/SAT	 AV / Input / RDS	 Vol+	 Vol+
 1	 1	 Vol-	 Vol-
 2	 2	 CH-	 CH- / Page-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Right	 Right
 8	 8	 OK	 OK
 9	 9	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat
 SAT	 Shift + 0	 Yellow	 Yellow / YouTube / Repeat
 π	 TV/Radio /	 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home	 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--	 RCL	 Back / Return

Original	Substitut	Original	Substitut
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 LIST	 SMART	 MEDIA	 CH PAGE
 VOL+	 DISPLAY	 TV	 DVD
 VOL-	 CD - STB	 1	 TAPE
 2	 TUNER	 3	 VIDEO
 4	 AUX - HDD	 5	 USB
 6	 BLUETOOTH	 7	 HDMI - SAT
 8	 PC	 9	 FAV MARKER
 GUIDE EPG	 HDMI - SAT	 0	 FAV MARKER
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
<a href="http://www.mandis.tv">www.mandis.tv</a>			





	Original	Substitut	Original	Substitut
	FUNC	 Setup / OPT /		
	Timer	 Sleep / Timer		
	Audio	 Audio / Lang I/II		
	Lang	 Shift + Audio / Lang I/II		
	Text	 Text / Goto		
	A-Z	 Zoom / Size		

