



Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /

Original	Substitut	Original	Substitut
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 OK	 RETURN	 BACK
 EXIT	 CANCEL	 LIST	 SMART
 VOL+	 MEDIA	 CH PAGE	 DISPLAY
 TV	 DVD	 CD - STB	 1
 VIDEO	 TAPE	 TUNER	 4
 AUX - HDD	 USB	 BLUETOOTH	 5
 GUIDE EPG	 HDMI - SAT	 PC	 6
 NETFLIX	 APP	 YouTube	 7
 SEARCH	 REPEAT	 REPEAT A-B	 8
 RANDOM	 FAV MARKER	 0	 9
			
www.mandis.tv			





Original	Substitut	Original	Substitut
 [≡]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-o-]	 Zoom / Size		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

