 




| Original   | Substitut   |
|--|---|
|  Power    |  Power               |
|  Source   |  AV / Input / RDS    |
|  1        |  1                   |
|  2        |  2                   |
|  3        |  3                   |
|  4        |  4                   |
|  5        |  5                   |
|  6        |  6                   |
|  7        |  7                   |
|  8       |  8                  |
|  9      |  9                 |
|  TV     |  TV/Radio /        |
|  0      |  0                 |
|  Recall |  Fav / Marker / PC |
|  V+     |  Vol+              |
|  Mute   |  Mute / Dimmer     |
|  P+     |  CH+ / Page+       |

| Original   | Substitut   |
|--|---|
|  V-             |  Vol-                    |
|  World/Internet |  Smart / List            |
|  P-             |  CH- / Page-             |
|  Menu           |  Menu / Home             |
|  Q.Menu         |  D.Menu / Top            |
|  Up             |  Up                      |
|  Left           |  Left                    |
|  OK             |  OK                      |
|  Right          |  Right                   |
|  Down          |  Down                   |
|  Back         |  Back / Return         |
|  Exit         |  Exit / Cancel / Clear |
|  i            |  Info / Angle          |
|  Music/Camera |  Display / Media       |
|  TV Guide     |  Guide / EPG / -/-     |
|  */O          |  Shift + 1             |
|  */Q          |  Shift + 2             |





| Original   | Substitut   | Original | Substitut |
|--|---|----------|-----------|
|  [=]/Text |  Text / Goto                 |          |           |
|  Red      |  Red / Netflix / Search      |          |           |
|  Green    |  Green / APP / Repeat        |          |           |
|  Yellow   |  Yellow / YouTube / Repeat   |          |           |
|  Blue     |  Blue / Prime Video / Random |          |           |
|  Lang     |  Audio / Lang I/II           |          |           |
|  [=]..    |  Sound / Title               |          |           |
|  [-O-]    |  Setup / OPT /               |          |           |
|  <<       |  << / Tune-                  |          |           |
|  Pause    |  Pause / Step / Freeze       |          |           |
|  >>      |  >> / Tune+                 |          |           |
|  Rec    |  Rec / Rec Mode            |          |           |
|  Play   |  Play / Slow               |          |           |
|  Stop   |  Stop / Hold               |          |           |
|  |   |          |           |
|  |   |          |           |
|  |   |          |           |
|  |   |          |           |
|  |   |          |           |

