



Original	Substitut
	Mute / Dimmer
	TV/Radio /
	Power
	Picture / Format
	Pause / Step / Freeze
	Audio / Lang I/II
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info / Angle

Original	Substitut
	0
	Shift + 0
	AV / Input / RDS
	Menu / Home
	Up
	CH+ / Page+
	Exit / Cancel / Clear
	Left
	Vol-
	OK
	Vol+
	Right
	Down
	CH- / Page-
	Shift + CH- /
	I<< / Preset-
	>>I / Preset+





Original		Substitut	
	Page+	+	Shift + CH+ /
	Fav		Fav / Marker / PC
	Guide		Guide / EPG / -/--
	Red / F1		Red / Netflix / Search
	Green / F2		Green / APP / Repeat
	Yellow / F3		Yellow / YouTube / Repeat
	Blue / F4		Blue / Prime Video / Random
	Text		Text / Goto

Original		Substitut	

