




























 















Original	Substitut	Original	Substitut
Power		Power	Power
Recall		Back / Return	Back / Return
CC		Subtitle / EQ	Subtitle / EQ
Text		Text / Goto	Text / Goto
Smart		Smart / List	Smart / List
Sleep		Sleep / Timer	Sleep / Timer
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Reset		Exit / Cancel / Clear	Exit / Cancel / Clear

Original	Substitut	Original	Substitut
CH / Guide		Guide / EPG / -/--	Guide / EPG / -/--
Up		Up	Up
M		Menu / Home	Menu / Home
A / CH		Info / Angle	Info / Angle
Down		Down	Down
Vol+		Vol+	Vol+
Vol-		Vol-	Vol-
Left / -		Left	Left
Right / +		Right	Right
Mute		Mute / Dimmer	Mute / Dimmer
CH+		CH+ / Page+	CH+ / Page+
CH-		CH- / Page-	CH- / Page-
A		Red / Netflix / Search	Red / Netflix / Search
B		Green / APP / Repeat	Green / APP / Repeat
C		Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
D		Blue / Prime Video / Random	Blue / Prime Video / Random
G		Shift + Yellow / YouTube / Repeat	Shift + Yellow / YouTube / Repeat































Original	Substitut	
Clock	 + 	Shift + Sleep / Timer
E	 + 	Shift + Red / Netflix
F	 + 	Shift + Green / APP
A / V		AV / Input / RDS

Original	Substitut








Original	Substitut	Original	Substitut
Power		Power	Power
Recall		Back / Return	Back / Return
CC		Subtitle / EQ	Subtitle / EQ
Text		Text / Goto	Text / Goto
Smart		Smart / List	Smart / List
Sleep		Sleep / Timer	Sleep / Timer
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Reset		Exit / Cancel / Clear	Exit / Cancel / Clear

Original	Substitut	Original	Substitut
Up		Up	Up
CH / Guide		Guide / EPG / -/--	Guide / EPG / -/--
Down		Down	Down
M		Menu / Home	Menu / Home
Vol+		Vol+	Vol+
A / CH		Info / Angle	Info / Angle
Vol-		Vol-	Vol-
Mute		Mute / Dimmer	Mute / Dimmer
Left / -		Left	Left
Right / +		Right	Right
CH+		CH+ / Page+	CH+ / Page+
CH-		CH- / Page-	CH- / Page-
A		Red / Netflix / Search	Red / Netflix / Search
B		Green / APP / Repeat	Green / APP / Repeat
C		Yellow / YouTube / Repeat	Yellow / YouTube / Repeat
D		Blue / Prime Video / Random	Blue / Prime Video / Random
Clock		Shift + Sleep / Timer	Shift + Sleep / Timer




























 










Original	Substitut	Original	Substitut
E	 +  Shift + Red / Netflix /		
F	 +  Shift + Green / APP /		
G	 +  Shift + Yellow / YouTube /		
A / V	 AV / Input / RDS		





Original	Substitut	Original	Substitut
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	M	 Menu / Home
Sleep	 Sleep / Timer	Right / +	 Right
1	 1	Left / -	 Left
2	 2	Vol+	 Vol+
3	 3	Vol-	 Vol-
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	E	 Shift + Red / Netflix / Search





Original	Substitut	Original	Substitut
F	 +  Shift + Green / APP /		
G	 +  Shift + Yellow / YouTube /		
Clock	 +  Shift + Sleep / Timer		
A / V	 AV / Input / RDS		

