 










 
 



 













 




 



 


 





 





 

 



 

 









Original	Substitut	Original	Substitut
 Standby	 Power	 Right	 Right
 A-B	 Yellow / YouTube / Repeat	 PBC	 D.Menu / Top
 Repeat	 Green / APP / Repeat	 Down	 Down
 Open / Close	 Eject / Surround	 Title	 Sound / Title
 Subtitle	 Subtitle / EQ	 Prev	 I<< / Preset-
 Angle	 Info / Angle	 Rev	 << / Tune-
 Language	 Audio / Lang I/II	 Fwd	 >> / Tune+
 OSD	 Display / Media	 Next	 >>I / Preset+
 L/R	 CH+ / Page+	 Slow	 Shift + Play /
 P/N	 CH- / Page-	 Step	 Shift + Pause / Step /
 Clear	 Exit / Cancel / Clear	 Pause	 Pause / Step / Freeze
 Program	 TV/Radio /	 Stop	 Stop / Hold
 Setup	 Setup / OPT /	 1	 1
 Up	 Up	 2	 2
 Enter	 OK	 3	 3
 Left	 Left	 Zoom	 Zoom / Size
 Play	 Play / Slow	 4	 4





	Original	Substitut		Original	Substitut
	5	TAPE 5	5		
	6	TUNER 6	6		
	10+	GUIDE EPG	Guide / EPG / -/--		
	7	AUX - HDD 7	7		
	8	USB 8	8		
	9	BLUETOOTH 9	9		
	0	HDMI - SAT 0	0		
	GO TO	GOTO TEXT	Text / Goto		
	RESUME	LIST SMART	Smart / List		
	DIGEST	RDS AV INPUT	AV / Input / RDS		
	VOL+	+ VOL	Vol+		
	MUTE	DIMMER MUTE	Mute / Dimmer		
	MODE	HOME MENU	Menu / Home		
	RETURN	RETURN BACK	Back / Return		
	VOL-	VOL -	Vol-		

