











 

 





















 









 

 

 














 
 



 


 

Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Substitut
 Recall	 Back / Return
 Display	 Display / Media
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 TV / Radio	 TV/Radio /
 EPG	 Guide / EPG / -/-
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Eject	 Eject / Surround
 CH -	 CH- / Page-





Original	Substitut	Original	Substitut
 Subtitle	 Subtitle / EQ		>> / Tune+
 CH List	 Smart / List		Play / Slow
 Rec	 Rec / Rec Mode		Pause / Step / Freeze
 Rec List	 Shift + Smart / List		Stop / Hold
 TV/TXT / D.Pro	 Shift + TV/Radio / Program	 Red / D.Set	 Shift + OK
 TV/TXT / D.Pro	 Text / Goto	 Red / D.Set	 Red / Netflix / Search
 Cancel / D.Rep	 Shift + Exit / Cancel / Clear	 Green / D.Menu	 D.Menu / Top
 Cancel / D.Rep	 Shift + Green / APP / Repeat	 Green / D.Menu	 Green / APP / Repeat
 Reveal / D.Goto	 Shift + Text /	 Yellow / D.Sub.	 Yellow / YouTube / Repeat
 Nicam/A2 /	 Shift + Play /	 Yellow / D.Sub.	 Shift + Subtitle / EQ
 Nicam/A2 /	 Shift + Audio / Lang I/II	 Blue / D.Lan	 Blue / Prime Video / Random
 Index / I<<	 I<< / Preset-	 Blue / D.Lan	 Audio / Lang I/II
 Hold / >>I	 >>I / Preset+		
 Hold / >>I	 Shift + Stop /		
 Size / D.Zoom	 Zoom / Size		
 Subpage / D.Title	 Shift + Sound / Title		
			<< / Tune-

Original	Substitut	Original	Substitut
	>> / Tune+		Play / Slow
	Pause / Step / Freeze		Stop / Hold
	Red / D.Set		Shift + OK
	Red / D.Set		Red / Netflix / Search
	Green / D.Menu		D.Menu / Top
	Green / D.Menu		Green / APP / Repeat
	Yellow / D.Sub.		Yellow / YouTube / Repeat
	Yellow / D.Sub.		Shift + Subtitle / EQ
	Blue / D.Lan		Blue / Prime Video / Random
	Blue / D.Lan		Audio / Lang I/II

